


Water Leak Sensor WLS-01

- 1 - Fasten the probe with screws and dowels. Attach the end of the probe cable to the corresponding socket on the sensor.
- 2 - Plug one end of the 1-Wire cable into the 1-Wire port of the data collection terminal. Complete the installation by connecting the other end to the 1-Wire port of the sensor.

For the water leak sensor to work properly, it must be installed at a location higher than the ground and dry in case of water leak / repression.

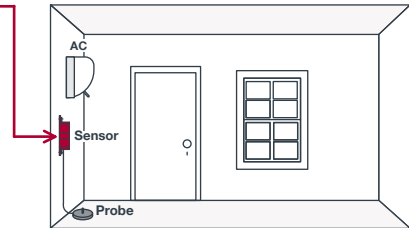


Technical Specifications

Voltage	3,3 VDC
Voltage Range	1 - 3 VDC
Temperature Range	0 / +60 °C
Humidity Range	%0 - %90 (Non-Ceoncensing)
Product Warranty	2 Years
Protection Class	IP 65
Cummunication Protocol	1-Wire
Current Consumption	< 10 mA
Compability	TS EN 61000-6-2
Dimensions	80 x 65 x 28 mm

Water Leak Sensor WLS-01

Sensor Connection

WLC-01
Water Leak Sensor's Probe

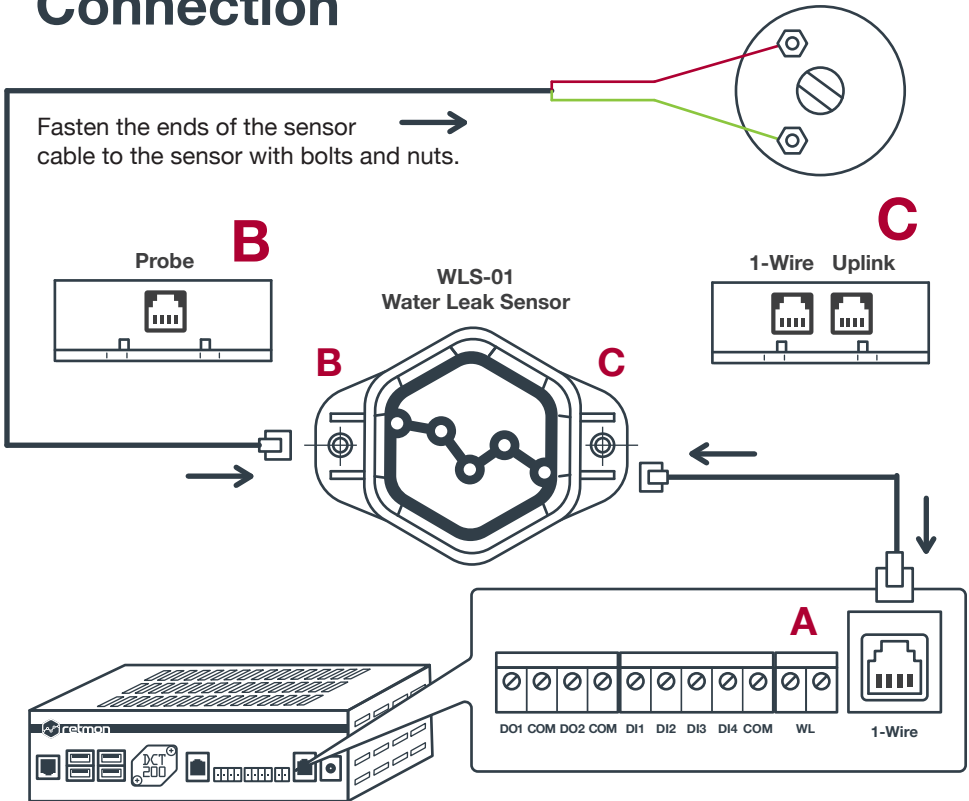

Probe Mounting WLC-01

It is important to install the water leak sensor probe where water leakage may occur. For example: In data centers, server rooms can be installed on the floor below. The place to be installed must be free from dust.

